



ENTRANCE DOOR BRACKETS

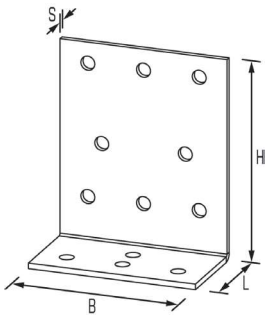

Art. No.	Dimensions [mm]								nN	EAN	Weight	Pallet	PU		
	H	x	L	x	W(B)	x	T(S)	Ø 5							
20000022	70	x	30	x	60	x	2,0	12		110409	0,090	7000	100	■	■

Entrance door brackets are brackets for universal use for timber/timber fastening.


Z-CONNECTOR

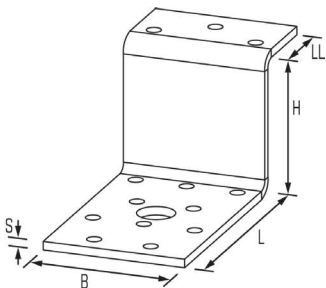

Art. No.	Dimensions [mm]									nN	nBo	EAN	Weight	Pallet	PU		
	H	x	L	x	LL	x	W(B)	x	T(S)	Ø 5	Ø 13	4019346	kg				
34	40	x	75	x	50	x	30	x	3,0	13	1,00	190005	0.165	3400	100	■	■
35	50	x	75	x	50	x	30	x	3,0	13	1,00	190012	0.175	3400	100	■	■
36	60	x	75	x	50	x	30	x	3,0	13	1,00	190029	0.185	3400	100	■	■

Z-connectors are used, for example, to fasten OSB or corrugated beams to laminated timber beams.

CORNER ANGLE BRACKETS

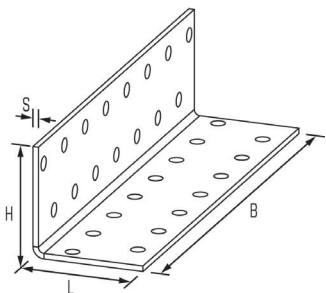

Art. No.	Dimensions [mm]							nN	EAN	Weight	Pallet	PU		
	H	x	L	x	W(B)	x	T(S)	Ø 5	4019346	kg				
11541	40	x	40	x	100	x	2,0	20	110447	0.120	3500	50	■	
11542	40	x	40	x	150	x	2,0	30	110454	0.185	3000	50	■	
11543	40	x	40	x	200	x	2,0	40	110461	0.235	3000	50	■	
11544	40	x	40	x	250	x	2,0	50	110478	0.295	2400	50	■	

Corner angle brackets are for fixing timber/timber connections.